

FIG. 1

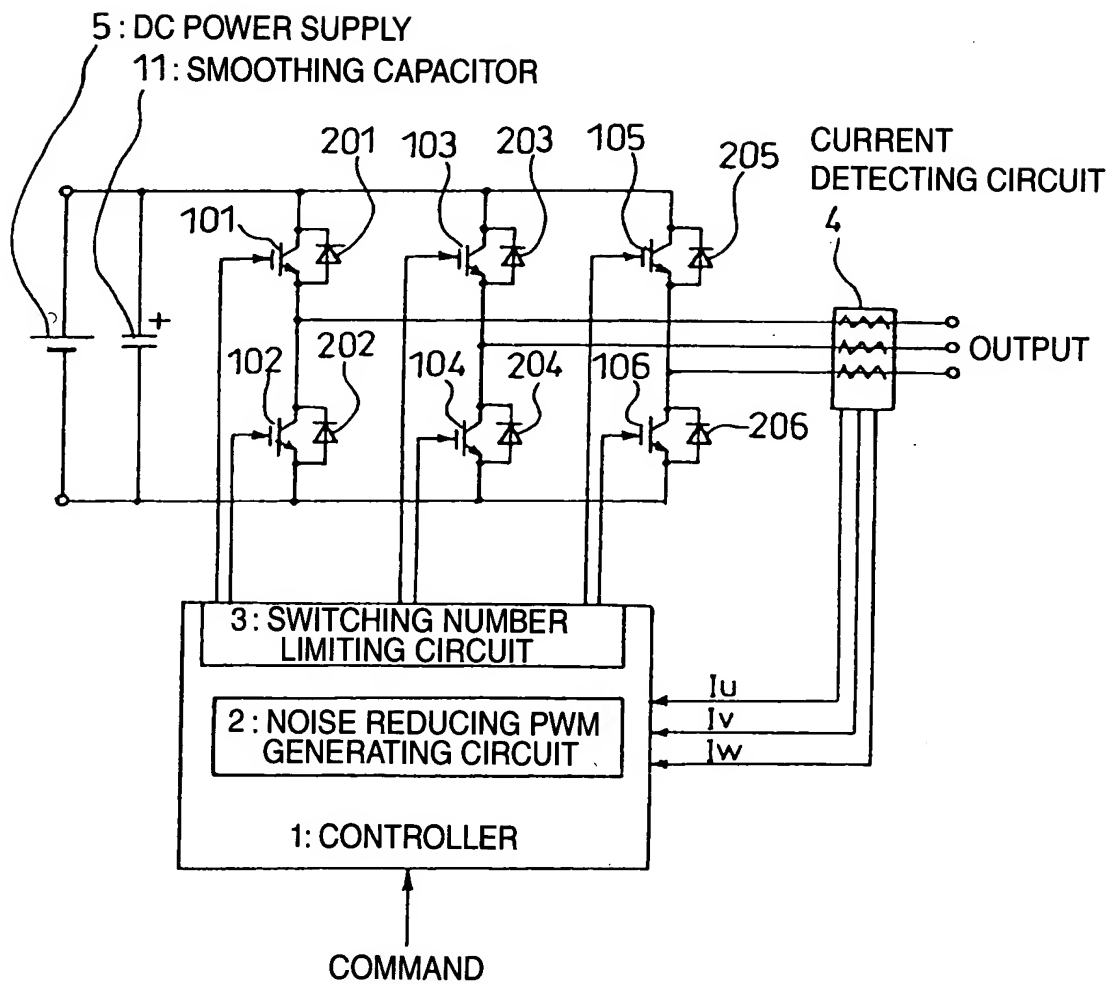


FIG. 2

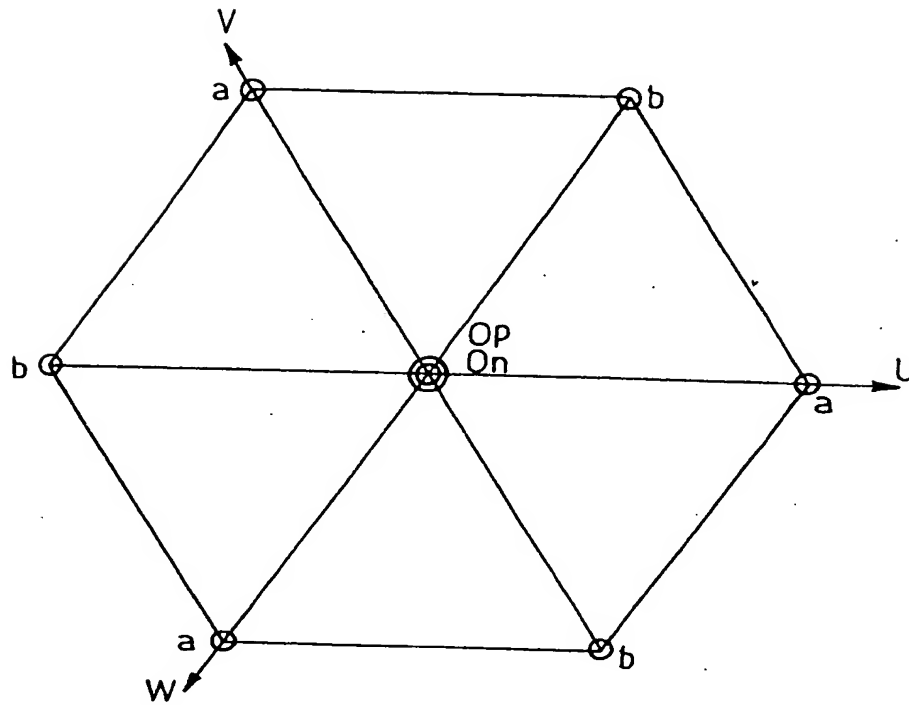


FIG. 3

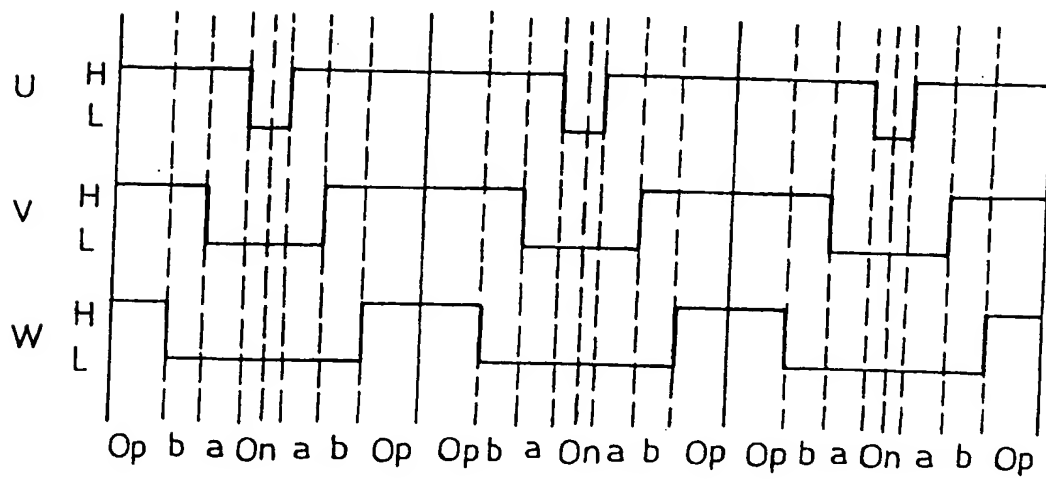


FIG. 4

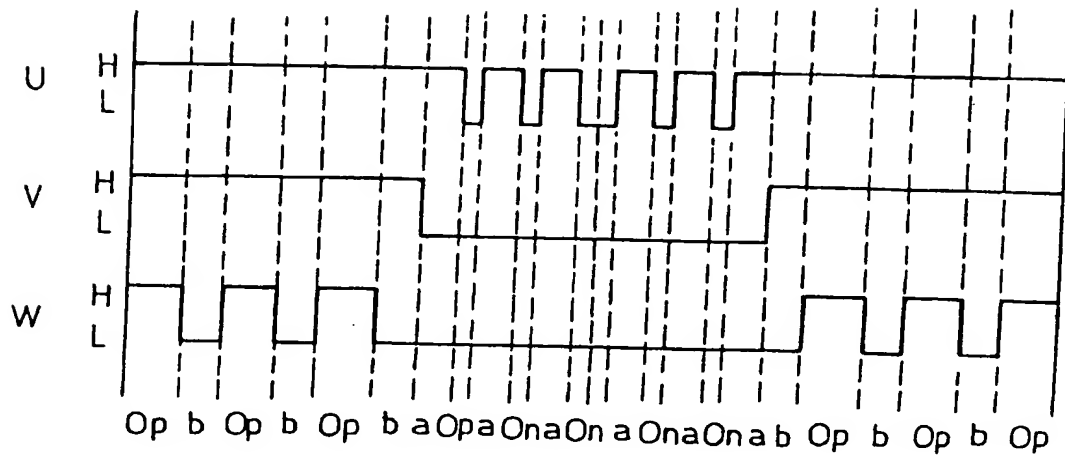


FIG. 5

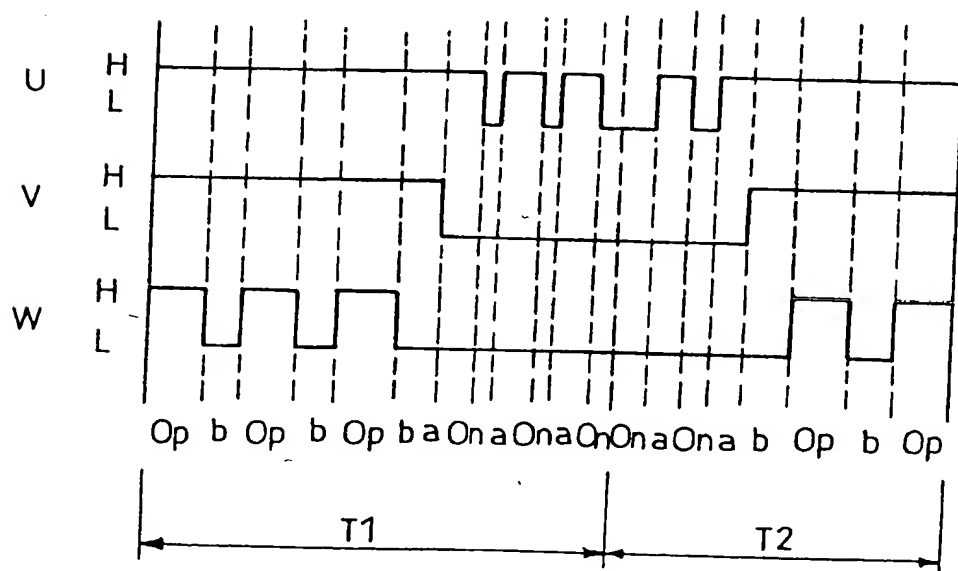


FIG. 6

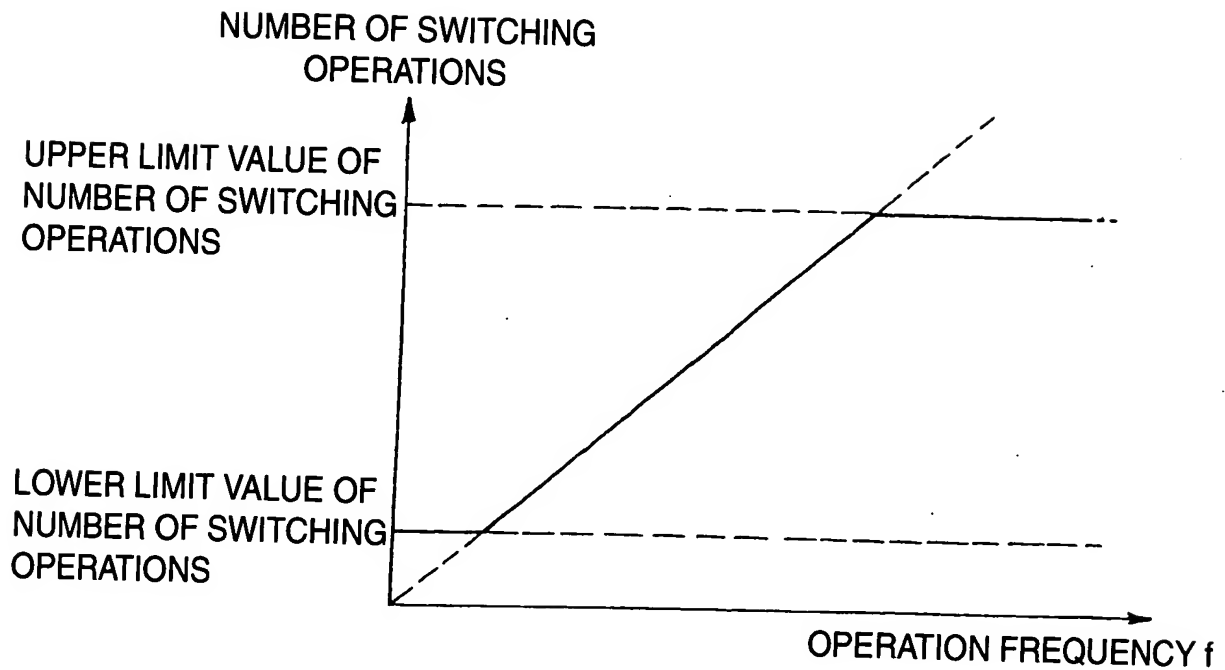


FIG. 7


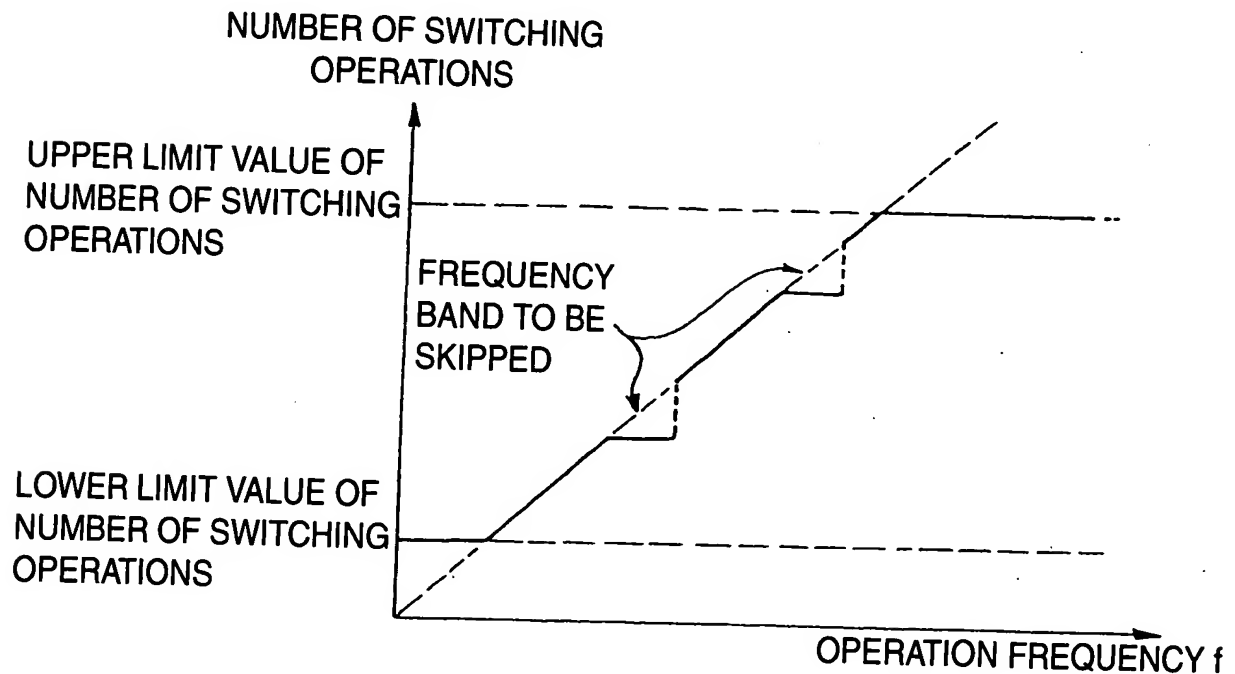


FIG. 8

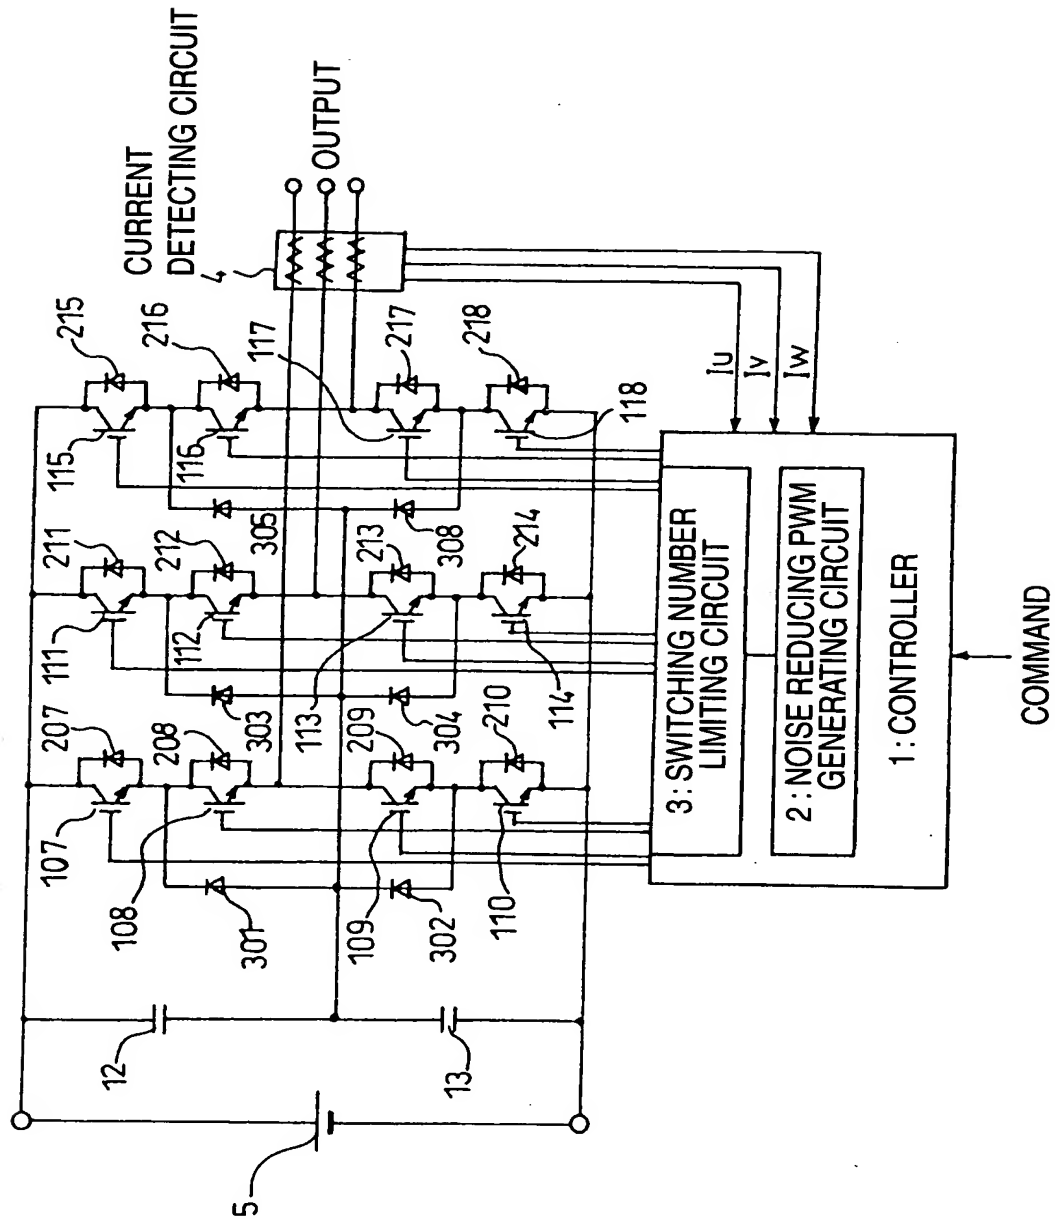

The diagram shows three-phase voltage waveforms (U, V, W) and a control signal (OpbpapOobnanOn) over time. The voltage waveforms are sinusoidal, and the control signal is a digital pulse.

FIG. 11

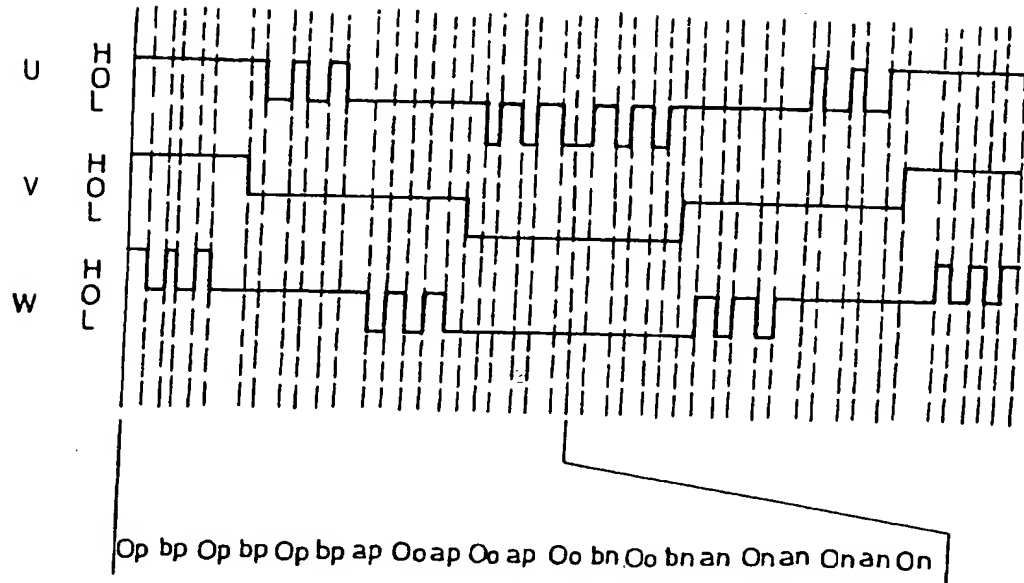


FIG. 12

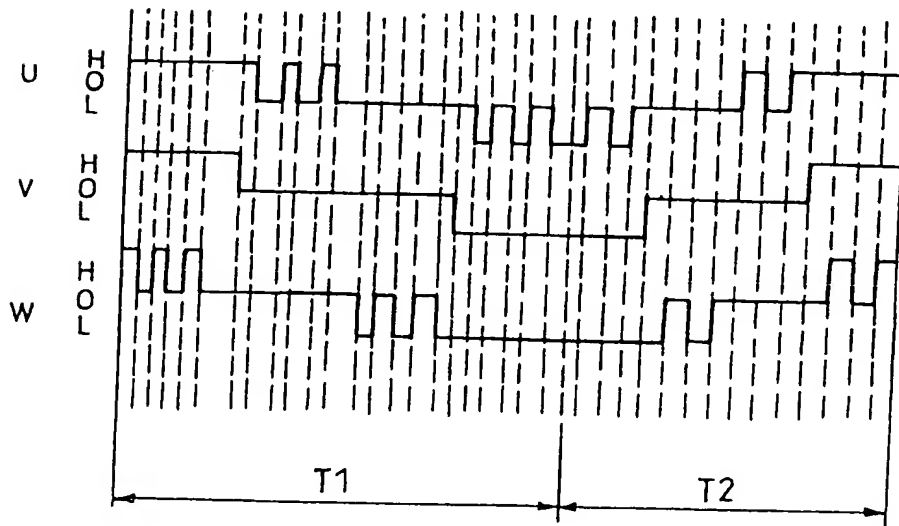


FIG. 13

